

Netgear Router Instructions:



Open a web browser like Internet Explorer or Firefox. Enter the [internal IP address](#) of your router in the address bar of your browser. By default the IP address should be set to 192.168.1.1.



You should see a box prompting you for your username and password. Enter your username and password now. By default the username is **admin**, and the password is **password**. Click the **Ok** button to log in to your router.



- Setup Wizard
- Setup
 - Basic Settings
 - Wireless Settings
- Content Filtering
 - Logs
 - Block Sites
 - Block Services
 - Schedule
 - E-mail
- Maintenance
 - Router Status
 - Attached Devices
 - Backup Settings
 - Set Password
 - Router Upgrade
- Advanced
 - Port Forwarding
 - Port Triggering
 - WAN Setup
 - LAN IP Setup
 - Wireless Setup
 - Dynamic DNS
 - Static Routes
 - Remote Management
 - UPnP
- Logout

Basic Settings

Does Your Internet Connection Require A Login?

- Yes
- No

Account Name (If Required)

WGR614v4

Domain Name (If Required)

forward.com

Internet IP Address

- Get Dynamically From ISP
- Use Static IP Address

IP Address

10 . 0 . 0 . 1

IP Subnet Mask

255 . 255 . 255 . 0

Gateway IP Address

10 . 0 . 0 . 1

Domain Name Server (DNS) Address

- Get Automatically From ISP
- Use These DNS Servers

Primary DNS

. . . .

Secondary DNS

. . . .

Router MAC Address

- Use Default Address
- Use Computer MAC Address
- Use This MAC Address

Apply Cancel Test

Click the **Port Forwarding** link near the left of the page.



- Setup Wizard
- Setup
 - Basic Settings
 - Wireless Settings
- Content Filtering
 - Logs
 - Block Sites
 - Block Services
 - Schedule
 - E-mail

Port Forwarding

Service Name

AIM

Server IP Address

192 . 168 . 0 .

Add

#	Service Name	Start Port	End Port	Server IP Address
---	--------------	------------	----------	-------------------

Edit Service

Delete Service

Add Custom Service

Click the **Add Custom Service** button near the bottom of the page.



Setup Wizard

- Setup Wizard
- Basic Settings
- Wireless Settings
- Content Filtering
- Logs
- Block Sites
- Block Services
- Schedule
- E-mail

Ports - Custom Services

Service Name:

Starting Port: (1~65534)

Ending Port: (1~65534)

Server IP Address: 192 . 168 . 0 .

Enter the name of the program into the **Service Name** box. It doesn't really matter what you put into this box, but something that will remind you why these ports are being forwarded would be a good idea.

If you are forwarding a single port, enter that port number into the **Starting Port** and the **Ending Port** boxes. If you are forwarding a range of ports, enter the lowest number of that range into the **Starting Port** box. Then enter the highest number of that range into the **Ending Port** box. Enter your dvr local IP address to forward these ports to into the **Server IP Address** box. I

When you are finished, click the **Apply** button.
And that is it! You are done!