

Netopia Router Instructions:




Open a web browser like Internet Explorer or Firefox. Enter the [internal IP address](#) of your router in the address bar of your browser.

In the picture above the address bar has `http://www.google.com/` in it. Just replace all of that with the internal IP address of your router. By default the IP address should be set to `192.168.1.254`.


A screenshot of a dialog box titled "Enter Network Password". It contains the following fields and options:

- Site: 192.168.62.1
- Realm: Realm1
- User Name: admin
- Password: [masked with asterisks]
- Save this password in your password list
- Buttons: OK, Cancel

You should see a box prompting you for your username and password. Enter your username and password now. By default Username is **admin**, **password would be the serial number from the back of the Netopia router**, Click the **Ok** button to log in to your router.

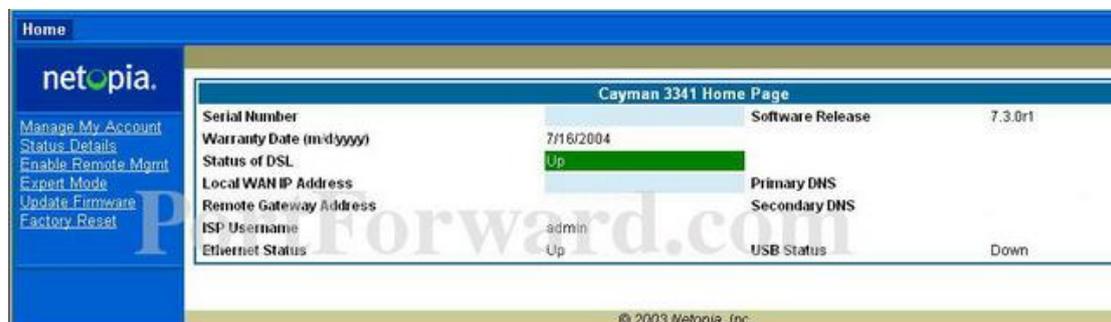

Click the **Expert Mode** link near the left of the page.

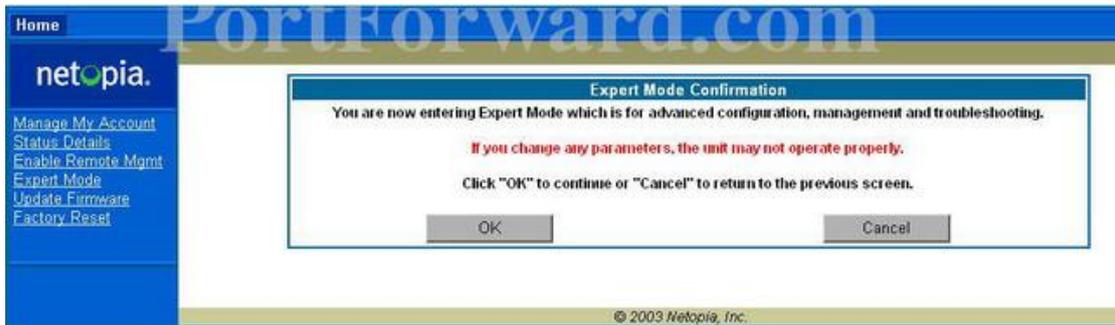

Click the **Ok** button near the center of the page.



Click the **Configure** link near the left of the page.




The menu on the left should change. In this new menu, click **Advanced**.



Click the **Pinholes** link near the center of the page.



Click the **Add** button near the center of the page.

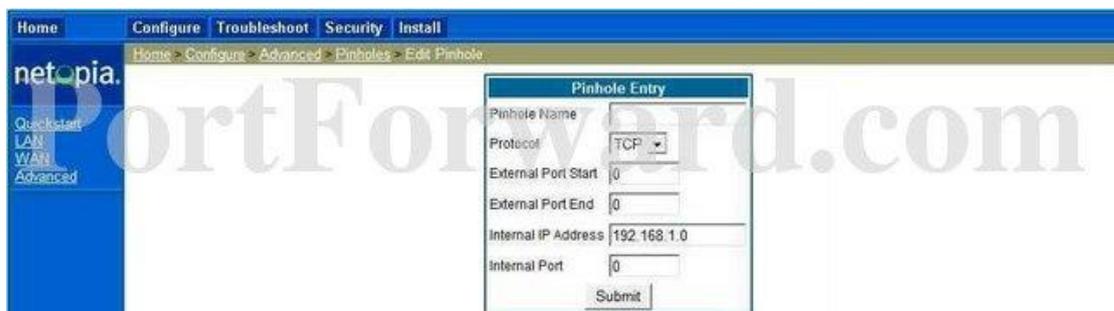

Enter the name of the program into the **Pinhole Name** box. It doesn't really matter what you put into this box, but something that will remind you why these ports are being forwarded would be a good idea.

Use the **Protocol Select** drop down box to select the protocol type of the ports you are forwarding.


If you are forwarding a single port, enter that port number into the **Internal Port** and the **External Port Start** boxes. If you are forwarding a range of ports, enter the lowest number of that range

into the **Internal Port** box. Then enter the highest number of that range into the **External Port Start** box.

Enter your DVR IP address to forward these ports to into the **Internal IP Address** box.

When you are finished, click the **Submit** button.

Click the **Alert** button near the right of the page.

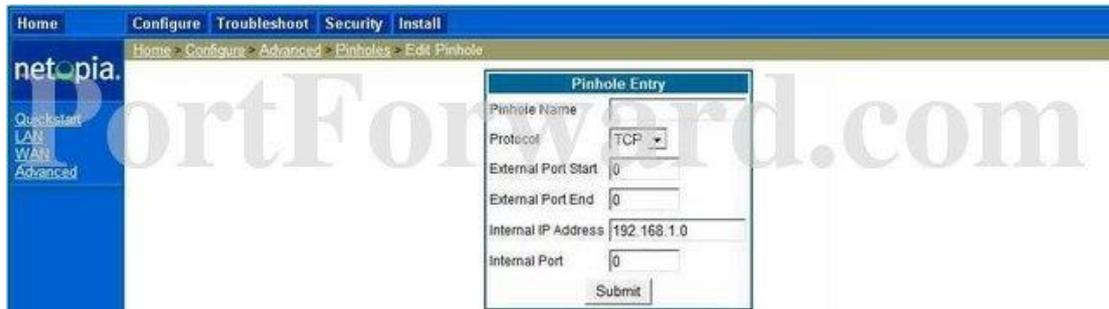

The screenshot shows the Netopia web interface. The top navigation bar includes 'Home', 'Configure', 'Troubleshoot', 'Security', and 'Install'. The breadcrumb trail is 'Home > Configure > Advanced > Pinholes > Edit Pinhole'. A 'Pinhole Entry' form is displayed with the following fields: 'Pinhole Name' (empty), 'Protocol' (set to 'TCP'), 'External Port Start' (0), 'External Port End' (0), 'Internal IP Address' (192.168.1.0), and 'Internal Port' (0). A 'Submit' button is located at the bottom of the form. A large 'PortForward.com' watermark is overlaid on the page.

When you're finished, click **Save and Restart** near the center of the screen to save your changes.

And that's it! You're done!